


## WASHING MACHINE

**EWT 600**


# Electrolux

## 1. TECHNICAL CHARACTERISTICS

DIMENSIONS	Height Width Depth	850 mm 400 mm 600 mm
VOLTAGE / FREQUENCY TOTAL POWER		230 V / 50 Hz 2300 W
WATER PRESSURE  Connection to the water network	Minimum Maximum	0,05 MPa (0,5 bar) 0,8 MPa (8 bars) Type 20x27
SPIN SPEED		600 rpm
 This washing machine complies with CEE directive 89-336 about the limitation of radioelectric disturbances and directive CEE 73-23 for electrical safety.		

## 2. WARNINGS


Keep this user's manual with your washing machine. If you sell your washing machine or give it away, make sure that it is accompanied by its user's manual. The new user can then be informed of how the washing machine operates and read relevant warnings. These warnings have been written for your safety and for the safety of others. Please read these comments carefully before installing and using your washing machine. Thank you for your attention.

- When you receive your washing machine, unpack it or have it unpacked immediately. Check its general appearance. Make any reserves in writing on the delivery form and keep a copy.
- Your washing machine was designed for use by adults. Make sure that children do not touch it or use it as a toy.
- Do not modify or attempt to modify the characteristics of this washing machine. This could be dangerous for you.
- Your washing machine is intended for normal domestic use. Do not use it for commercial or industrial purposes or for any purpose other than that for which it was designed : to wash, to rinse and to spin.
- Unplug the power supply plug and close the water supply tap every time after using your washing machine.
- Only wash articles that can resist machine washing. Refer to the instructions on the label for each article.
- Do not wash underwear with bones, or any material without hems, or torn materials in your washing machine.
- Remember to remove all coins, safety pins, boraches, screws, etc., before each wash. They can cause serious damage if they are left in your washing.
- Do not put articles in your washing machine if you have used a solvent, alcohol, trichloroethylene, etc., to remove stains from them. If you must use these stain removers, wait until the product has evaporated before putting the articles in the drum.
- Collect all small articles such as socks, belts, etc., in a small cloth bag or pillow case.
- Use the quantity of detergent indicated in the «proportioning of detergents» section.
- Always unplug the washing machine before cleaning it and doing any maintenance.
- This washing machine is heavy. Take care when moving it.
- You must remove the packing on the washing machine before use. Failure to remove all transport protection devices can cause damage to the washing machine or nearby furniture.
- The washing machine must be unplugged while packing is being removed.
- Do not allow any one other than a qualified plumber to make the hydraulic connections necessary to install your washing machine.
- The washing machine must be plugged in to a power outlet with a conform earth.
- Call a qualified electrician if the electrical installation in your residence is such that you have to modify it before you can connect your washing machine.
- Please read the instructions in the "electrical connections" chapter carefully before connecting your washing machine.
- After installing your washing machine, make sure that it is not standing on its electrical power supply cable.
- When your machine is installed on a carpeted floor, make sure that the carpet does not close off the ventilation openings near the bottom of the machine.
- The power supply cable may be only replaced by the After Sales Service.
- Your manufacturer cannot be held responsible for any damage resulting from a nonconform installation.
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.


## 3. INSTALLATION

### 3.1. Unpacking


Packing used to protect internal parts of the washing machine during transport must be removed before the washing machine is put into service for the first time.

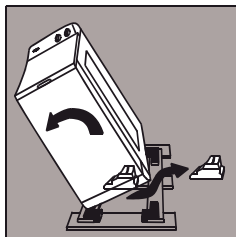


Remove all packing from the washing machine. Tilt the washing machine sideways and then remove the packing under the motor, and straighten the washing machine.

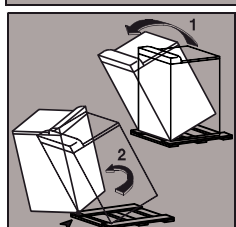


Tilt the washing machine backwards, rotate it by a quarter of a turn on one of its corner to remove the transport base.

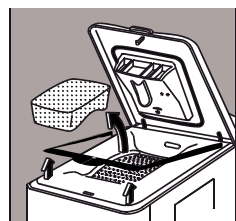


Open the washing machine lid and remove the immobilization packing and plastic films. Close the lid.

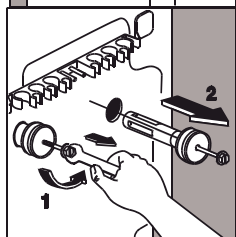


Use a 10 mm spanner to remove the two screws and spacers at the back.

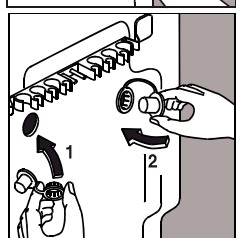

You can now see the openings that must be closed with the caches in the pack attached to the washing machine; do not forget to fold down the central capsule.

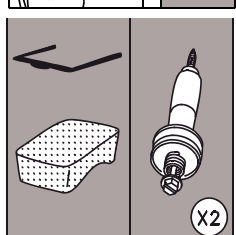

Make sure that you have removed all these parts from your washing machine and keep them so that you can use them again if you need them for future transport.

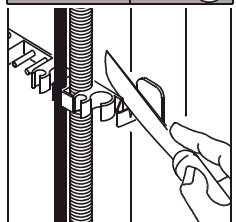


If you want to keep your washing machine aligned with the adjacent furniture, you can cut the pipe support strip at the back of your washing machine. Leave the two side closers in place.

### 3.2. Position

Put the washing machine on a flat hard floor in a well ventilated room.

Make sure that your washing machine does not touch the wall or any other furniture in the room.


### 3.3. Moving your washing machine

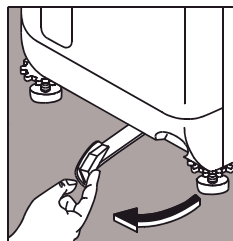

If you want to move your washing machine, lift it onto its rollers by pulling the lever at the bottom of the washing machine all the way to the left. When you have put your washing machine into the required location, put the lever back into its initial position.

### 3.4. Leveling


Precise leveling will prevent vibrations, noise and movements of the washing machine during operation.

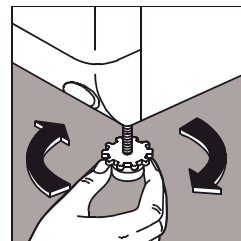

Make the washing machine level by adjusting the leveling screw that is too short. Unscrew the stand and locking collar assembly (lift the washing machine if necessary). When the washing machine is stable, maintain the stand on the ground and turn the locking collar as far as possible.


### 3.5. Water inlet

Please install the water inlet hose onto the back of your washing machine:

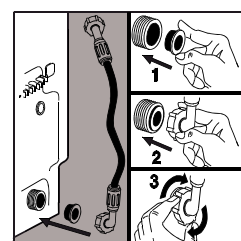

- Insert the seal in the hole at the bottom of the back panel (fig. 1).


- Screw on the bottom fitting of the water inlet hose as shown in fig. 2 and fig. 3.

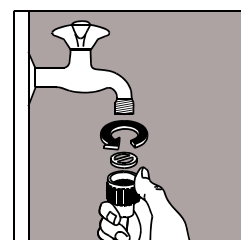

- Connect the feed hose connector onto the water inlet tap, taking care to position the gasket correctly.  
- Turn on the water inlet tap.

The water inlet hose cannot be extended. If it is too short, please contact the After Sales Department.

### 3.6. Drainage

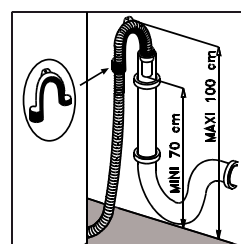

- Assemble the hose holder onto the drain hose.

- Place the assembly in a drainage pipe (or in a sink) at a height between 70 and 100 cm. Make sure that it will not fall out.

You must provide an air intake at the end of the drainage hose, to avoid any water being siphoned.

**Important:** the drainage hose must not be extended, on any account. If it is too short, contact a qualified engineer.

### 3.7. Electrical connection

You can only connect this washing machine to 230 V single phase power supply.

Check rating of the fuse line: 10 A at 230V.

The washing machine must not be connected through an extension cable or a power bar.


Check that the earthing connection is conform with the regulations in force.

## 4. USING

### 4.1. The control panel

- 1 - «ON/OFF» pushbutton
- 2 - «Half load» pushbutton
- 3 - «Rinse hold» pushbutton

- 4 - Control lamp
- 5 - Programme selector
- 6 - Temperature selector

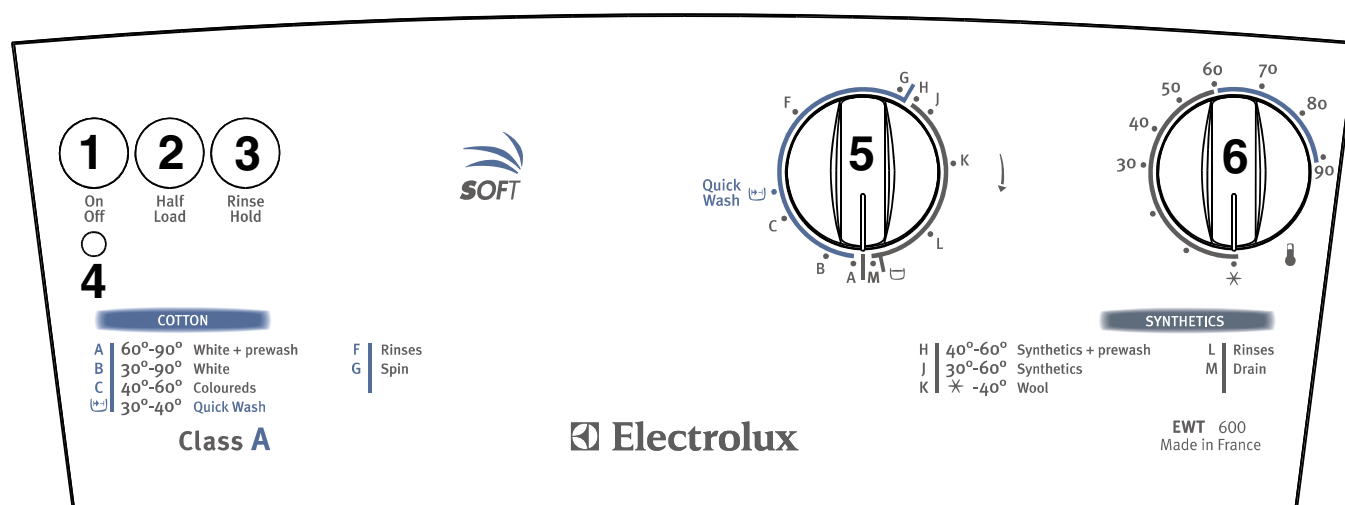


### 4.2. How to do a wash ?

Before the first wash in your washing machine, we recommend that you should do a preliminary wash at 90°C with detergent but without any washing to clean the tub.

#### 4.2.1. Loading the washing

- Lift the machine cover.
- Open the drum by pressing on the locking button A; the two flaps automatically separate.
- Insert the washing, close the drum and the cover of your washing machine.

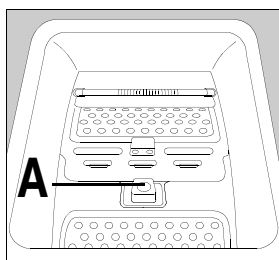

Warning : before you close the cover of your washing machine, make sure that the drum door is properly closed:

- the two flaps latched together,
- the locking button A extended.

#### 4.2.2. Proportioning of detergents

Your washing machine was designed to reduce water and detergent consumption, therefore reduce the doses recommended by detergent manufacturers.

Put the powder detergent dose into the wash compartment [III] and into the prewash compartment [II] if you chose the «prewash» option. Put the softener into the [X] compartment if you wish.

If you are using a different type of detergent, refer to the «detergents and additives» section in the washing guide.

#### 4.2.3. Choice of the temperature

Choose the wash temperature applicable for the selected programme (using the information given in the programmes table) and comply with the temperature shown on the care label for each article to be washed (see the washing guide).

#### 4.2.4. Choice of the pushbuttons

Press the chosen pushbuttons.

##### 4.2.4.1. «Half load» pushbutton

This pushbutton allows to wash small quantity of linen not much soiled (max. 2,5 kg) on cotton programmes only by reducing the water quantity during rinsings.

##### 4.2.4.2. «Rinse hold» pushbutton

If you use this pushbutton, the tub remains full of water at the end of the last rinse to prevent the washing from becoming creased if it is not taken out of the drum as soon as the washing machine is stopped.

##### 4.2.4.3. Control lamp

The control lamp illuminates when the appliance is working (ON/OFF pushbutton pressed on). It extinguishes when the ON/OFF pushbutton is pressed off.

#### 4.2.5. Choice of the programme

Select the programme depending on the nature and the degree of soil of the laundry. Turn the programme selector clockwise to select the chosen programme.

#### 4.2.6. Starting the programme

After you choose the washing programme, press the «On/Off» pushbutton to start the cycle. The corresponding control lamp illuminates.

#### 4.2.7. End of the programme

When the selected programme is over, the appliance stops automatically and the timer knob stays on a stop-position (the control lamp lights off) or on a rinse hold position (rinse hold pushbutton pressed). The opening of the lid is only possible 2 minutes after the washing machine stops.

The programmes end :


- by a spinning (for all the programmes).
- by a rinse hold (if you have pressed the rinse hold pushbutton). You can finish these programmes by choosing either the Spinning programme, either the Draining programme taking care to release the on/off pushbutton before doing your choice.

At the end of the cycle, release the on/off pushbutton to switch the appliance off. Release any other pushbuttons that are pressed in. Pull out the electricity plug and close the water supply tap.

**Note:** we recommend that you should leave the lid and the drum open after use to air the washing drum.

## 5. PROGRAMMES TABLE

The following does not show all possibilities, but simply the most frequent settings.

Programmes Washing type		Load	Possible options	Washing tempera- ture °C	Approximate consumptions *		
					Liters	kWh	Duration
A	White + prewash	5,0 kg	Half load Rinse hold	60 - 90	2,50	75	145-155
B	White**			30 - 90	2,10	66	130-140
C	Coloureds			40 - 60	1,10	66	100-110
 Quick wash				30 - 40	0,70	66	85-95
F	Rinses			-	0,20	56	45-55
G	Spin			-	0,03	0	0-10
H	Synthetics + prewash	2,5 kg	Rinse hold	40 - 60	1,10	57	80-90
J	Synthetics			30 - 60	0,90	45	70-80
K	Wool			* - 40	0,45	52	40-50
L	Rinses			-	0,01	36	15-25
M	Drain	5,0 kg		-	0,002	0	0-10

\* Data provided for guidance and subject to change depending on usage conditions.

The consumptions indicated correspond to the higher temperature for each programme.

\*\* Reference programme for tests according to standard IEC 456 (60° White Cotton programme) :  
1,15 kWh / 66 L / 135 min.

## 6. WASHING GUIDE

### 6.1. Sorting and preparing your washing

- Sort the washing by type and care symbol (see chapter 6.4: International symbols for care of textiles): normal wash for strong washing that can resist energetic wash and spin; delicate wash for delicate washing that should be treated more carefully. For mixed loads composed of articles of different types of fibers, choose a program and temperature suitable for the most fragile fiber.
- Wash white washing and color washing separately. Otherwise, the white washing may be colored or look gray.
- New clothes very often have too much color. Preferably wash new clothes separately for the first time. Respect "wash separately" and "wash several times separately" care instructions.
- Empty pockets and spread out the washing.
- Take off all loose buttons, pins and hooks and eyes. Close zip fasteners, tie knots in laces and straps.
- Turn clothes made of several layers of textiles (sleeping bags, anoraks, etc.), colored hosiery and wool and textiles with add-on decorations, inside out.
- Wash small delicate items (socks, tights, bras, etc) in a washing net.
- Treat curtains with special care. Remove curtain hooks and put net curtains in a net bag or a sachet.

### 6.2. Washing load depending on the nature of the material

The quantity of washing that you put in your drum must not exceed the maximum capacity of your washing machine. This capacity may vary depending on the nature of your textiles. Reduce the quantity of washing if it is very dirty or if you have terry cloth type materials.

Not all textiles have the same volume and the same water retention capacity. This is why in general the drum should be filled:

- completely, but without excessive pressure for cotton and linen, and for mixed washe,
- half full for treated cottons and synthetic fibers,
- about one third full for very delicate articles such as net curtains and wool.

For a mixed wash, fill the drum as required for the most delicate material.

### 6.3. Detergents and additives











Only use detergents and additives suitable for use in a washing machine. Read the manufacturer's instructions and respect section 4.2.2.




Powder detergents can be used without restriction; liquid detergents should be poured either in the proportioning bowl directly in the drum, or in the wash compartment provided that the washing machine is started immediately; detergents in tablets or doses must be put into the wash compartment of the detergents dispenser in your washing machine. The quantity of detergent to be used depends on the amount of washing to be washed, the hardness of the water and how dirty the washing is.






If the water is soft, you can reduce the doses slightly. Increase the doses slightly if the water is hard (it is recommended to use a water softener) or if the washing is very dirty or stained.






You can ask the water distribution company in your region or any other competent authority to find out the degree of hardness of your water.





 

### 6.4. International symbols for care of textiles

NORMAL WASH						
	Wash at 95°C	Wash at 60°C	Wash at 40°C	Wash at 30°C		
DELICATE WASH					Delicate wash by hand	Do not wash

		
JAVEL WATER	Bleaching with chlorine (Javel water) allowed (only cold and with a dilute solution)	Do not bleach with chlorine (Javel water)

				
IRONING	High temperature (max 200°C)	Average temperature (max 150°C)	Low temperature (max 100°C)	Do not iron

				
DRY CLEANING	Dry cleaning (all usual solvents)	Dry cleaning (all solvents except trichloroethylene)	Dry cleaning (only oil solvents and R113)	Do not dry clean

					
DRYING	Dry washing spread out	Dry washing hung up	Dry washing on hanger	Drying in drum allowed	Do not dry in drum

## 7. CARE AND CLEANING

Do not do any cleaning operation until you have unplugged the washing machine.

### 7.1. Descaling the washing machine

Normally there is no need to descale the washing machine if the detergent was correctly proportioned.

If descaling is necessary, use a special non-corrosive product specially designed for washing machines that you can find in the shops. Respect the proportion and frequency of descaling shown on your packaging.

### 7.2. The surface


Clean the surface of your washing machine using lukewarm water and a mild detergent. Never use alcohol, solvents or similar products.

### 7.3. The detergents dispenser


From time to time, you must clean the detergents dispenser in order to eliminate the possible wastes of the detergents and then to avoid an operating problem.

The detergent dispenser is very easy to remove for a light cleaning.

#### Disassembly:

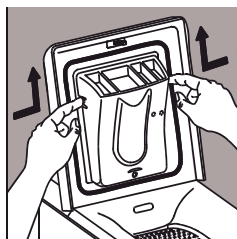


Press the clips on each side of the detergents dispenser and pull it upwards.

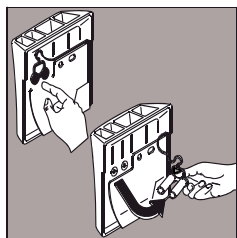

You can thus clean it using running water and a brush or a twisted cloth. Check that the siphons at the back of the detergents dispenser are not blocked.

#### Reassembly :


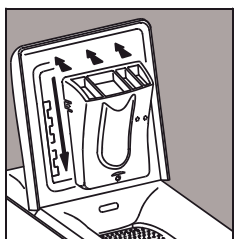


Put the detergents dispenser in the notches until they lock.

### 7.4. The drain filter

Clean the filter at the bottom of the washing machine regularly. The "filter" light comes on if the filter is blocked. In this case clean it immediately. If you wash washing that is very fluffy, clean it after each wash.

- **Open the door, with a screwdriver for example:**

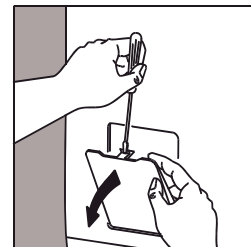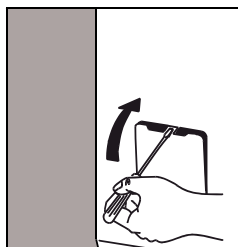

- **Drain residual water:**



Put a receptacle under the drain. Turn the cap in the anti-clockwise direction until it is vertical to release residual water.

- **Remove the filter:**



Unscrew the cap all the way and take it off. Clean it thoroughly with running water. Put the assembly back and screw it in the clockwise direction.

After cleaning the filter, you are required to closed the door. In fact, for reasons of safety, the door must be closed when the appliance is working.

\*depending on model

## 8. OPERATING PROBLEMS

Many checks have been carried out during the manufacture of your washing machine. However, if you face a problem with its operation, please read the following sections before calling the After Sales Service:

Symptom	Cause
The washing machine will not start or will not fill:	<ul style="list-style-type: none"><li>the washing machine is not correctly connected, the electrical installation is not working,</li><li>the lid of your washing machine and the drum flaps are not correctly closed,</li><li>you did not control the program start correctly,</li><li>there is a power failure,</li><li>the water supply is closed off,</li><li>the water tap is closed,</li><li>the water inlet is blocked.</li></ul>
The washing machine fills up but empties again immediately:	<ul style="list-style-type: none"><li>the drain siphon is attached too low (see installation section).</li></ul>
The washing machine will not spin or will not drain:	<ul style="list-style-type: none"><li>the drain pipe is blocked or kinked,</li><li>the drain filter is blocked,</li><li>the «Drain» program or the «Rinse hold» option is selected,</li><li>the height of the drain siphon is wrong.</li></ul>
There is water on the floor around the washing machine:	<ul style="list-style-type: none"><li>excess detergent has made too much foam that overflowed,</li><li>the detergent is not suitable for machine washing,</li><li>the drain siphon is not hooked on properly,</li><li>the drain filter was not put back into place,</li><li>the water inlet pipe is leaking.</li></ul>
Washing results are not satisfactory:	<ul style="list-style-type: none"><li>the detergent is not suitable for machine washing,</li><li>there is too much washing in the drum,</li><li>the washing program is not appropriate,</li><li>there is not enough detergent.</li></ul>
The machine is vibrating or noisy:	<ul style="list-style-type: none"><li>not all the packing was removed from the machine (see unpacking section),</li><li>the washing machine is not leveled and properly packed,</li><li>the washing machine is too close to the wall or furniture,</li><li>the washing is not well distributed in the drum,</li><li>the load is not sufficient.</li></ul>
The washing cycle is much too long:	<ul style="list-style-type: none"><li>the water inlet is blocked,</li><li>there was a power supply failure or the water was cut off,</li><li>the motor temperature safety device tripped,</li><li>the water inlet temperature is lower than normal,</li></ul>
The washing machine stops during a washing cycle:	<ul style="list-style-type: none"><li>the water or electricity supply is defective,</li><li>a rinse hold was programmed.</li></ul>
The cover does not open during the cycle:	<ul style="list-style-type: none"><li>the cover cannot open until 1 to 2 minutes after the washing machine has stopped.</li></ul>
Softener or Javel water flows* through the overflow orifice when filling:	<ul style="list-style-type: none"><li>you did not put in the right amount,</li><li>the siphons at the back of the detergent dispenser are blocked.</li></ul>

\* depending on model.

If you have an operating problem, refer to the " Operating problems " section. If any work is necessary after you have made all your checks, please contact your washing machine dealer.

When you call the After Sales Service, mention the model and product number of your washing machine, and its serial number. This information is given on the inside of the filter door and on the name plate at the back of the washing machine.

If any work is done on your washing machine, insist that your After Sales Service uses manufacturer certified spare parts.